


VOR/DME PUT 117.4 Chan 121	APP CRS 211°	Rwy Idg TDZE Apt Elev	N/A N/A 238
--	------------------------	-----------------------------	--




Use Willimantic altimeter setting. NA	MISSED APPROACH: Climbing right turn to 2600 direct PUT VOR/DME and hold.
--	---

AWOS-3 119.125	WILLIMANTIC ASOS 133.675	PROVIDENCE APP CON ★ 135.4 244.875	UNICOM 123.0 (CTAF)
--------------------------	------------------------------------	--	-------------------------------

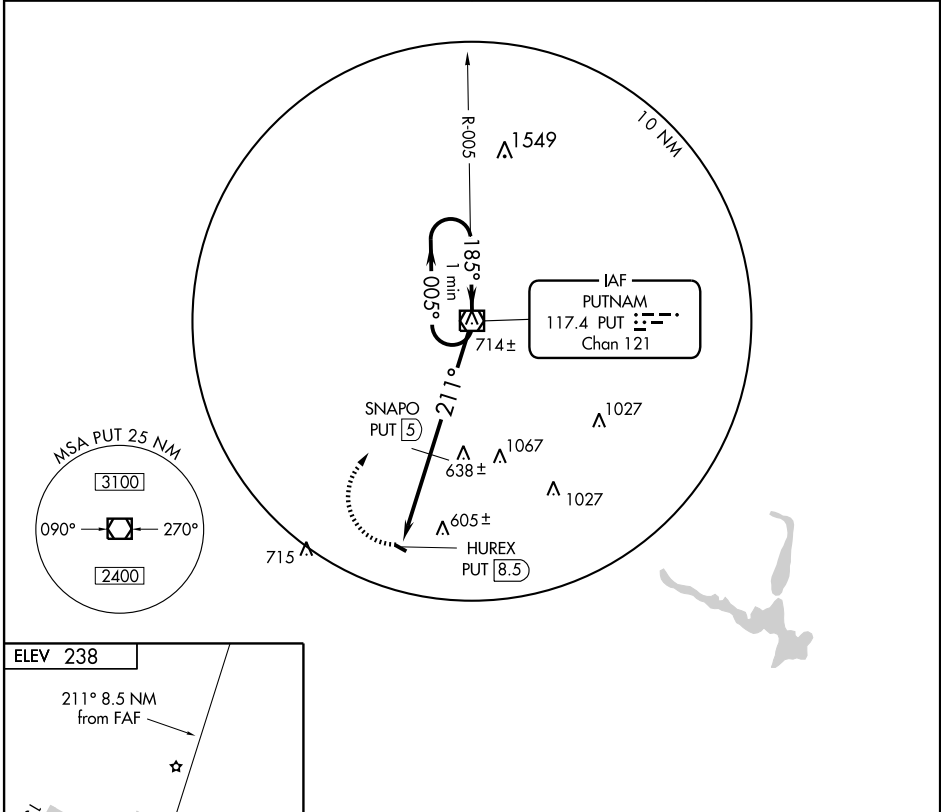

NE-1, 22 OCT 2009 to 19 NOV 2009

NE-1, 22 OCT 2009 to 19 NOV 2009

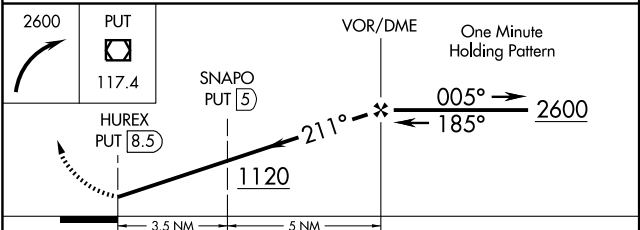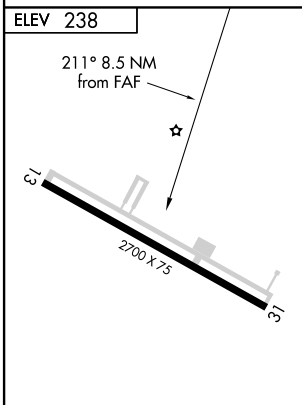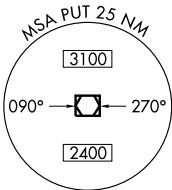

FAF to MAP 8.5 NM					
Knots	60	90	120	150	180
Min:Sec	8:30	5:40	4:15	3:24	2:50

CATEGORY	A	B	C	D
CIRCLING	1120-1¼	882 (900-1¼)		NA
SNAPO FIX MINIMUMS				
CIRCLING	900-1 662 (700-1)	980-1¼ 742 (800-1¼)		NA