

VORTAC VCN 115.2 Chan 99	APP CRS 061°	Rwy Idg TDZE Apt Elev N/A N/A 69
--	------------------------	--

NA Use Atlantic City, NJ altimeter setting.

MISSED APPROACH: Climbing right turn to 2000 direct VCN VORTAC and hold.





ATLANTIC CITY APP CON
134.25 385.5

UNICOM
122.7 (CTAF)

123.5 0

NE-2, 22 OCT 2009 to 19 NOV 2009

NE-2, 22 OCT 2009 to 19 NOV 2009

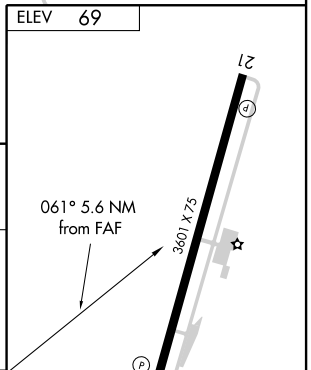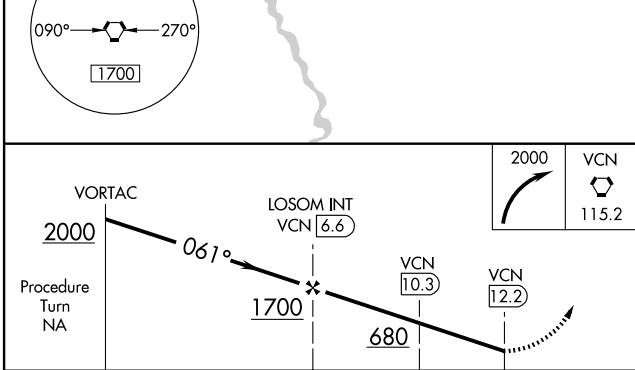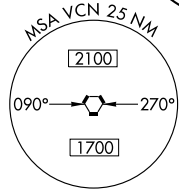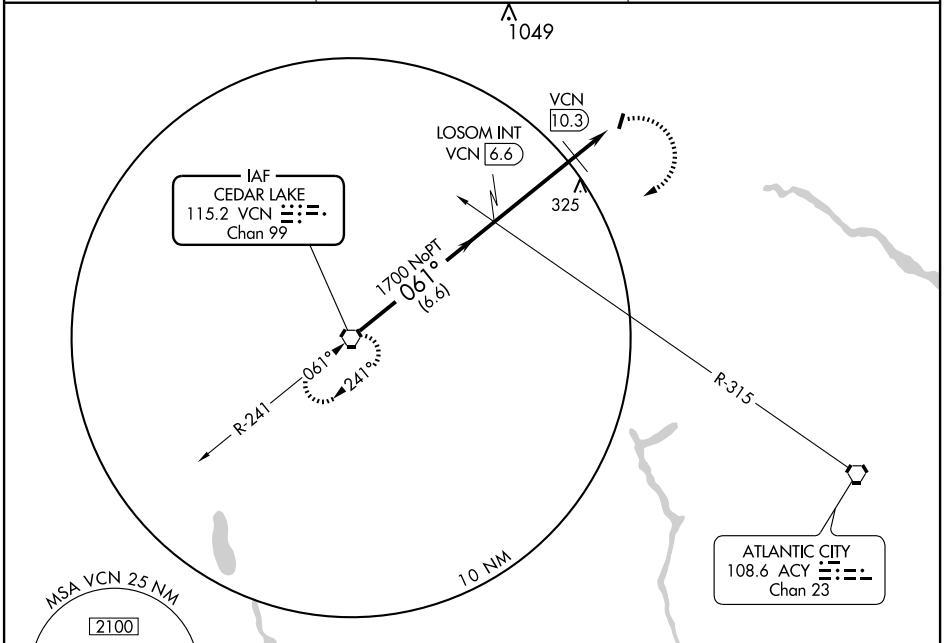

Procedure Turn	NA			
CATEGORY	A	B	C	D
CIRCLING	680-1	611 (700-1)	680-1 3/4 611 (700-1 3/4)	NA
DME MINIMA				
CIRCLING	520-1	451 (500-1)	520-1 1/2 451 (500-1 1/2)	NA

FAF to MAP 5.6 NM					
Knots	60	90	120	150	180
Min:Sec	5:36	3:44	2:48	2:14	1:52