

OTTAWA, OHIO

AL-6287 (FAA)


VORTAC FDY <b>108.2</b> Chan <b>19</b>	APP CRS <b>298°</b>	Rwy Idg TDZE Apt Elev	<b>4427</b> <b>764</b> <b>764</b>
--	------------------------	-----------------------------	---

**VOR RWY 27**  
OTTAWA / PUTNAM COUNTY (OWX)

**NA** DME or Radar Required. Visibility reduction by helicopters NA. When local altimeter setting not received, use Findlay altimeter setting and increase all MDA 40 feet.



MISSED APPROACH: Climb to 2500 via FDY VORTAC R-298, then left turn direct FDY VORTAC and hold.

AWOS-3 <b>120.525</b>	TOLEDO APP CON <b>120.8 317.55</b>	UNICOM <b>122.7 (CTAF) 0</b>
--------------------------	---------------------------------------	---------------------------------

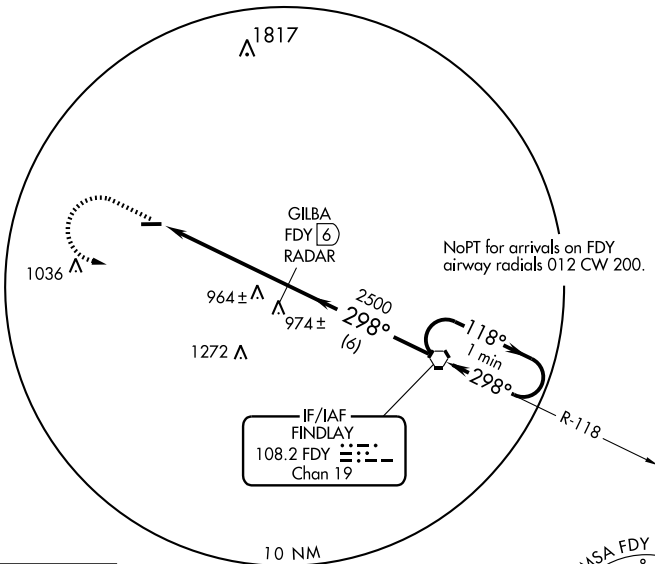

EC-2, 22 OCT 2009 to 19 NOV 2009

EC-2, 22 OCT 2009 to 19 NOV 2009

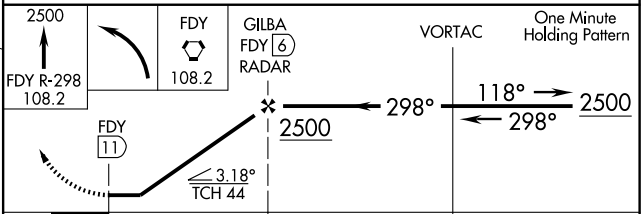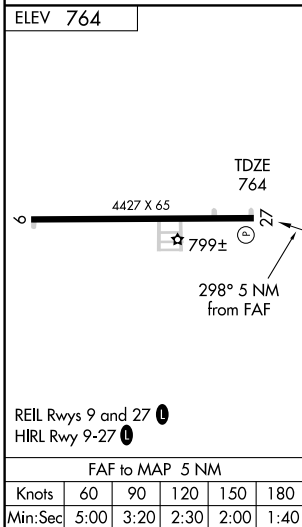

CATEGORY	A	B	C	D
S-27	1220-1	456 (500-1)	NA	NA
CIRCLING	1220-1	456 (500-1)	NA	NA

OTTAWA, OHIO  
Amdt 2 09295

41°02'N - 83°59'W

OTTAWA / PUTNAM COUNTY (OWX)  
**VOR RWY 27**