


VORTAC ODI <b>117.9</b> Chan <b>126</b>	APP CRS <b>184°</b>	Rwy Idg TDZE Apt Elev <b>1179</b>	<b>N/A</b> <b>N/A</b> <b>1179</b>
---	------------------------	--	---


**VOR/DME or GPS-A**  
CALEDONIA/HOUSTON COUNTY (CHU)

<b>▲</b> NA Use La Crosse, WI altimeter setting.	MISSED APPROACH: Climb to 2800 then left turn via ODI R-184 to AUTOS/14 DME and hold.
---	---

MINNEAPOLIS CENTER <b>128.6 363.0</b>	CTAF <b>122.9 0</b>
--	------------------------

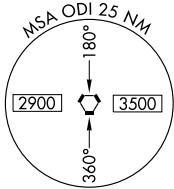


NODINE  
117.9 ODI  
Chan 126

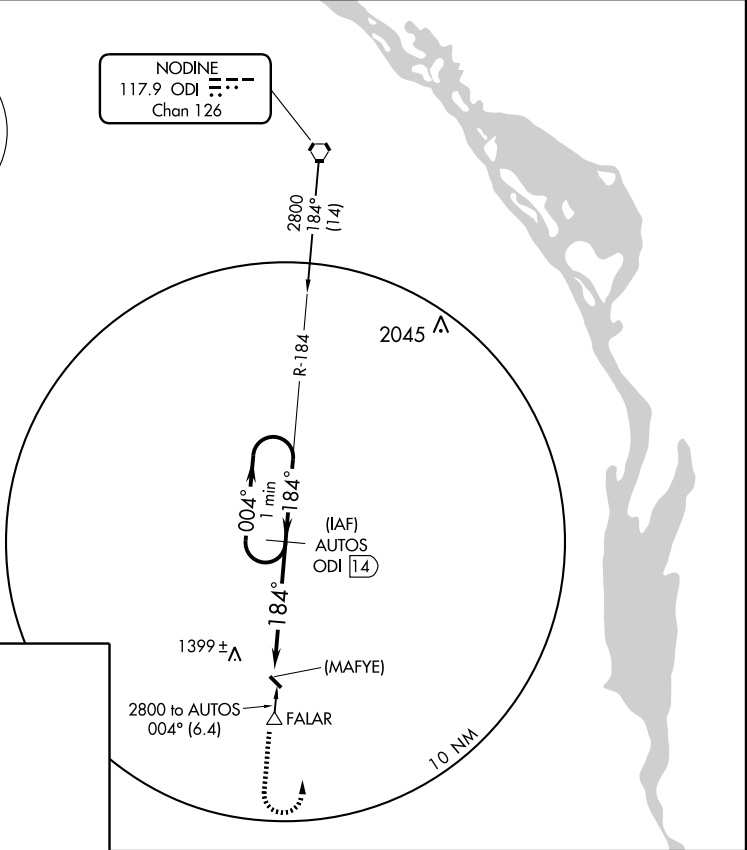


ELEV 1179

184° 4.8 NM from FAF

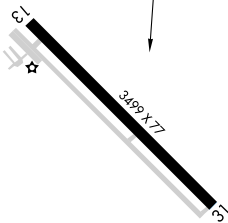

2800 ↑	AUTOS ODI 14 R-184	AUTOS ODI 14	One Minute Holding Pattern
-----------	-----------------------	--------------	----------------------------

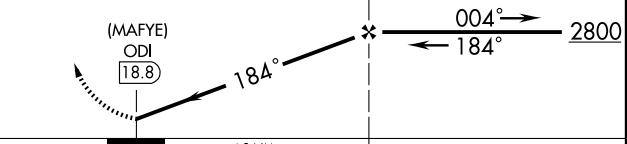

CATEGORY	A	B	C	D
CIRCLING	1820-1	641 (700-1)	1820-1¾ 641 (700-1¾)	NA

MIRL Rwy 13-31 0