

# RNAV (GPS) RWY 21


FLORA MUNI (F.O.A)

APP CRS <b>211°</b>	Rwy Idg <b>5003</b>
	TDZE <b>470</b>
	Apt Elev <b>473</b>

**⚠** If local altimeter setting not received, use Olney-Noble altimeter setting and increase all DAs/MDAs 40 feet. Baro-VNAV NA when using Olney-Noble altimeter setting. For uncompensated Baro-VNAV systems, LNAV/VNAV NA below -15°C (5°F) or above 54°C (130°F). DME/DME RNP-0.3 NA.




**MISSED APPROACH:**  
Climb to 2200 direct JISID and hold.

AWOS-3 <b>120.175</b>	KANSAS CITY CENTER <b>127.7 317.7</b>	UNICOM <b>122.7 (CTAF) 0</b>
--------------------------	--	---------------------------------

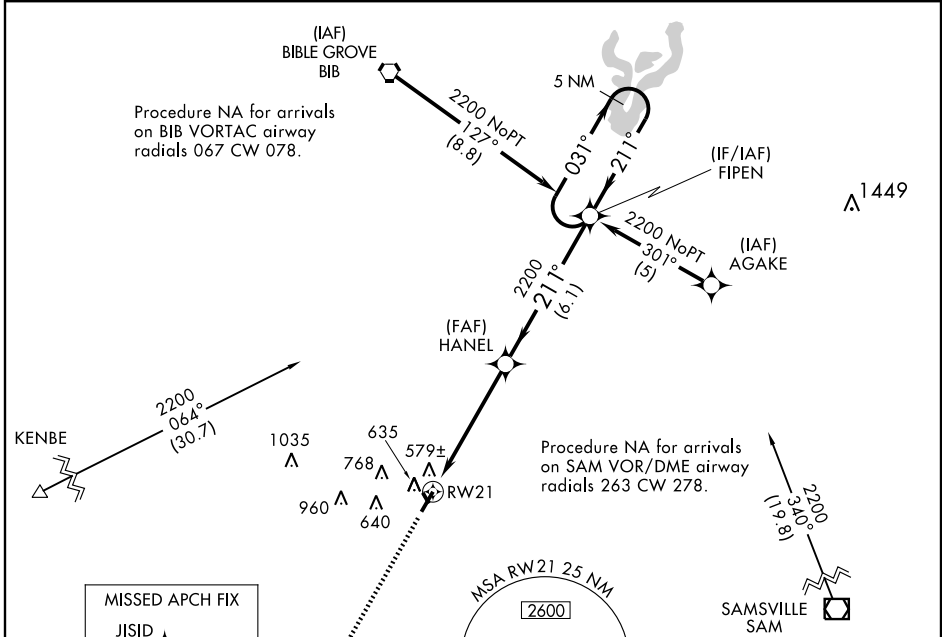

EC-3, 22 OCT 2009 to 19 NOV 2009

EC-3, 22 OCT 2009 to 19 NOV 2009

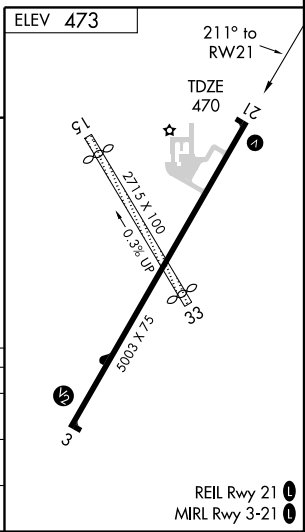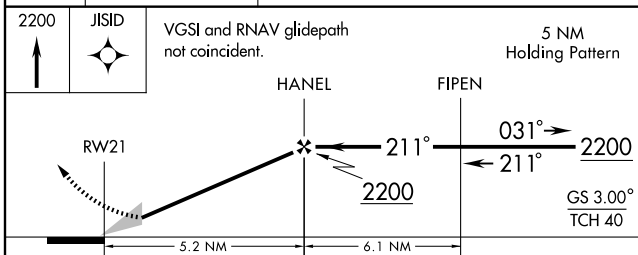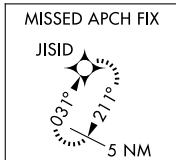

CATEGORY	A	B	C	D
LNAV/VNAV DA	849-1¼ 379 (400-1¼)			NA
LNAV MDA	900-1	430 (500-1)	900-1¼ 430 (500-1¼)	NA
CIRCLING	940-1	467 (500-1)	1120-1¾ 647 (700-1¾)	NA