

RNAV (GPS) RWY 14


TEKAMAH MUNI (TQE)

APP CRS	Rwy Idg	4001
146°	TDZE	1027
	Apt Elev	1027

⚠ DME/DME RNP-0.3 NA. When local altimeter setting not received, use Fremont altimeter setting and increase all MDAs 100 feet and **⚠** LNAV Cat C visibility ¼ mile. VDP NA with Fremont altimeter setting.


MISSED APPROACH: Climb to 3000 direct BRAVA and hold.

ASOS 127.275	OMAHA APP CON 124.5 263.0	UNICOM 123.0 (CTAF) 📻
------------------------	-------------------------------------	--

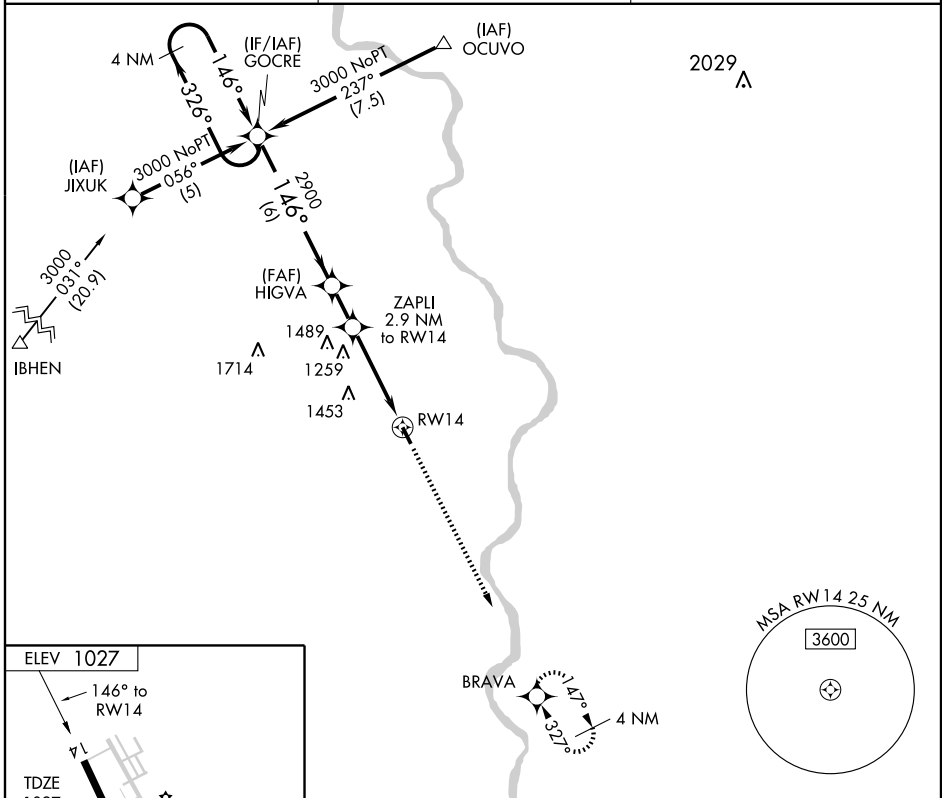

NC-2, 22 OCT 2009 to 19 NOV 2009

NC-2, 22 OCT 2009 to 19 NOV 2009

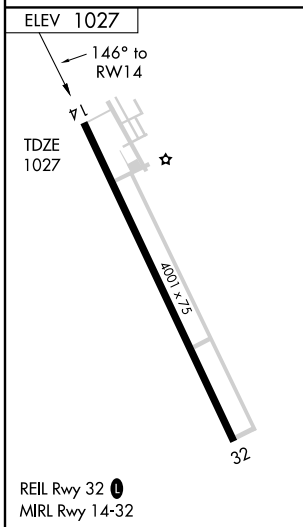

4 NM Holding Pattern GOCRE 3000 ← 326° 146° →	HIGVA 2900 146°	ZAPLI 2.9 NM to RWY14 TCH 40 3.05°	BRAVA 3000 4 NM 147° 327°	RWY 14 1.5 NM to RWY 14 1.5
				6 NM 2.8 NM 1.4 1.5
CATEGORY	A	B	C	D
LNAV MDA	1560-1	533 (600-1)	1560-1½ 533 (600-1½)	NA
CIRCLING	1560-1	533 (600-1)	1560-1½ 533 (600-1½)	NA