




NDB or GPS RWY 17

INDEPENDENCE MUNI (IIB)

NDB IIB 206	APP CRS 186°	Rwy Idg 5500
		TDZE 977
		Apt Elev 978

NA Use Waterloo altimeter setting. MISSED APPROACH: Climb to 3100 via IIB 186° bearing then right turn direct IIB NDB and hold.

AWOS-3 120.825	WATERLOO APP CON * 118.9 251.15	UNICOM 122.8 (CTAF) 0
--------------------------	---	--

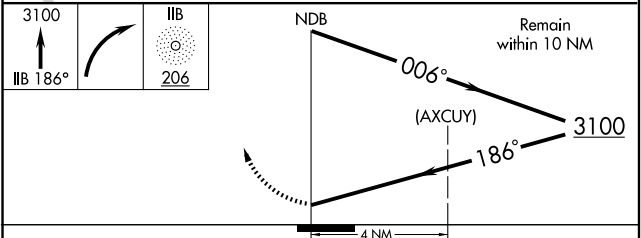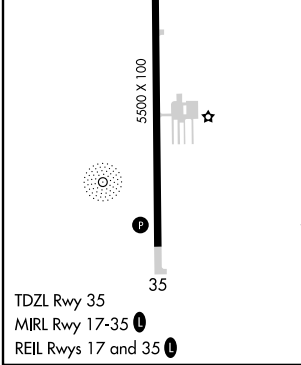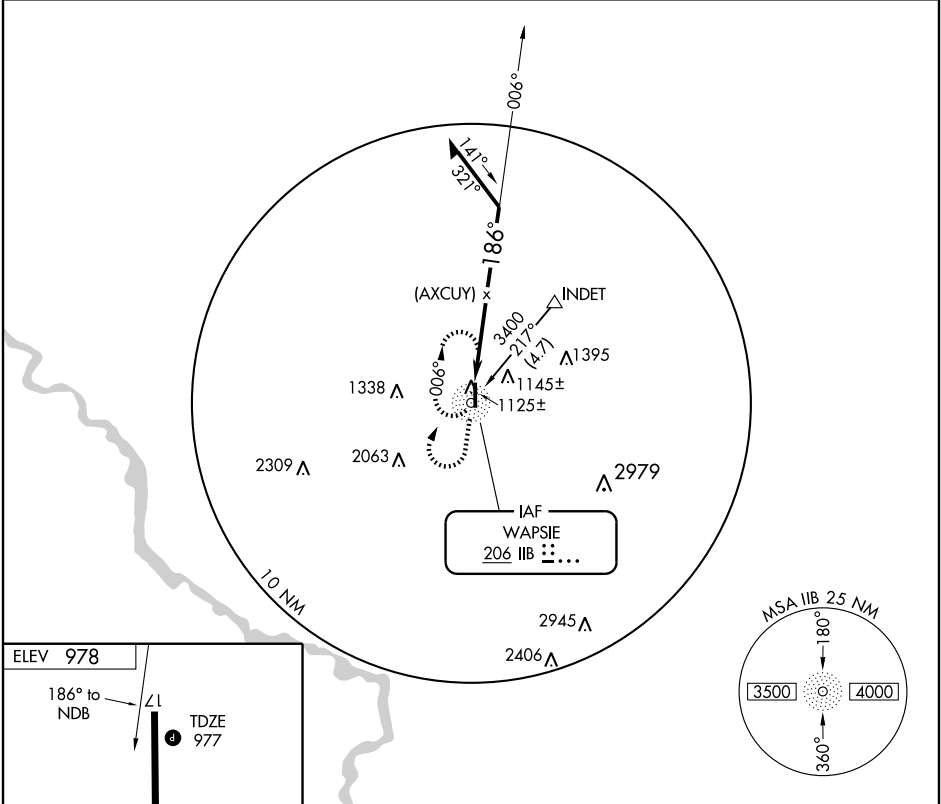

CATEGORY	A	B	C	D
S-17	1640-1	663 (700-1)	1640-1¾ 663 (700-1¾)	NA
CIRCLING	1640-1	663 (700-1)	1640-1¾ 663 (700-1¾)	NA

NC-3, 22 OCT 2009 to 19 NOV 2009

NC-3, 22 OCT 2009 to 19 NOV 2009