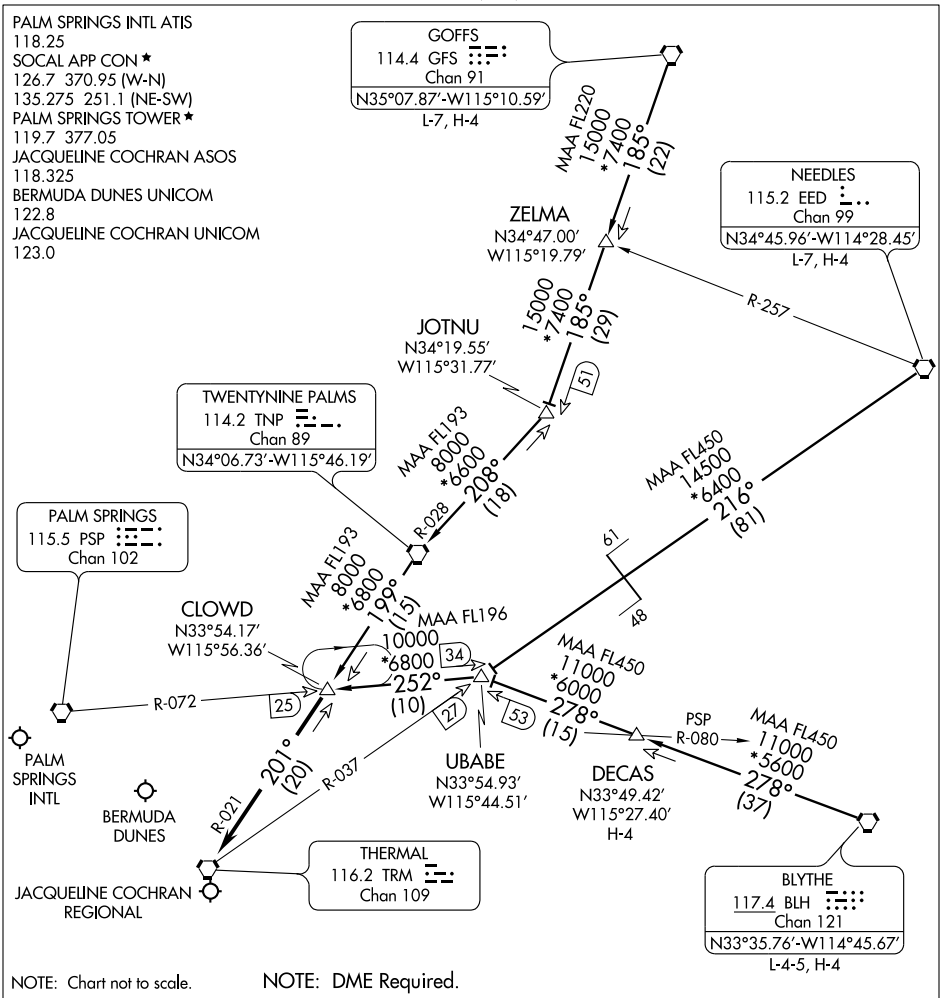

SW-3, 22 OCT 2009 to 19 NOV 2009

SW-3, 22 OCT 2009 to 19 NOV 2009

BLYTHE TRANSITION (BLH.CLOWD1): From over BLH VORTAC via BLH R-278 and PSP R-072 to CLOWD DME. Thence....

DECAS TRANSITION (DECAS.CLOWD1): From over DECAS INT via BLH R-278 and PSP R-072 to CLOWD DME. Thence....

GOFFS TRANSITION (GFS.CLOWD1): From over GFS VORTAC via GFS R-185 and TNP R-028 to TNP VORTAC, then via TNP R-199 to CLOWD DME. Thence....

NEEDLES TRANSITION (EED.CLOWD1): From over EED VORTAC via EED R-216 and TRM R-037 to UBABE DME, then via PSP R-072 to CLOWD DME. Thence....

....From over CLOWD DME via TRM R-021 to TRM VORTAC. Expect radar vectors to final approach course.