VORTAC SNS 117.3 Chan 120	APP CRS 082°	Rwy Idg 3483 TDZE 134 Apt Elev 134

VOR RWY 11
MARINA MUNI (OAR)

Use Monterey altimeter setting.
NA

MISSED APPROACH: Climb to 1200, then climbing left turn to 4000 via heading 307° and SNS R-293 to MOVER Int/SNS 18 DME and hold.

NORCAL APP CON
133.0 251.15

UNICOM
122.7 (CTAF) L

SW-2, 22 OCT 2009 to 19 NOV 2009

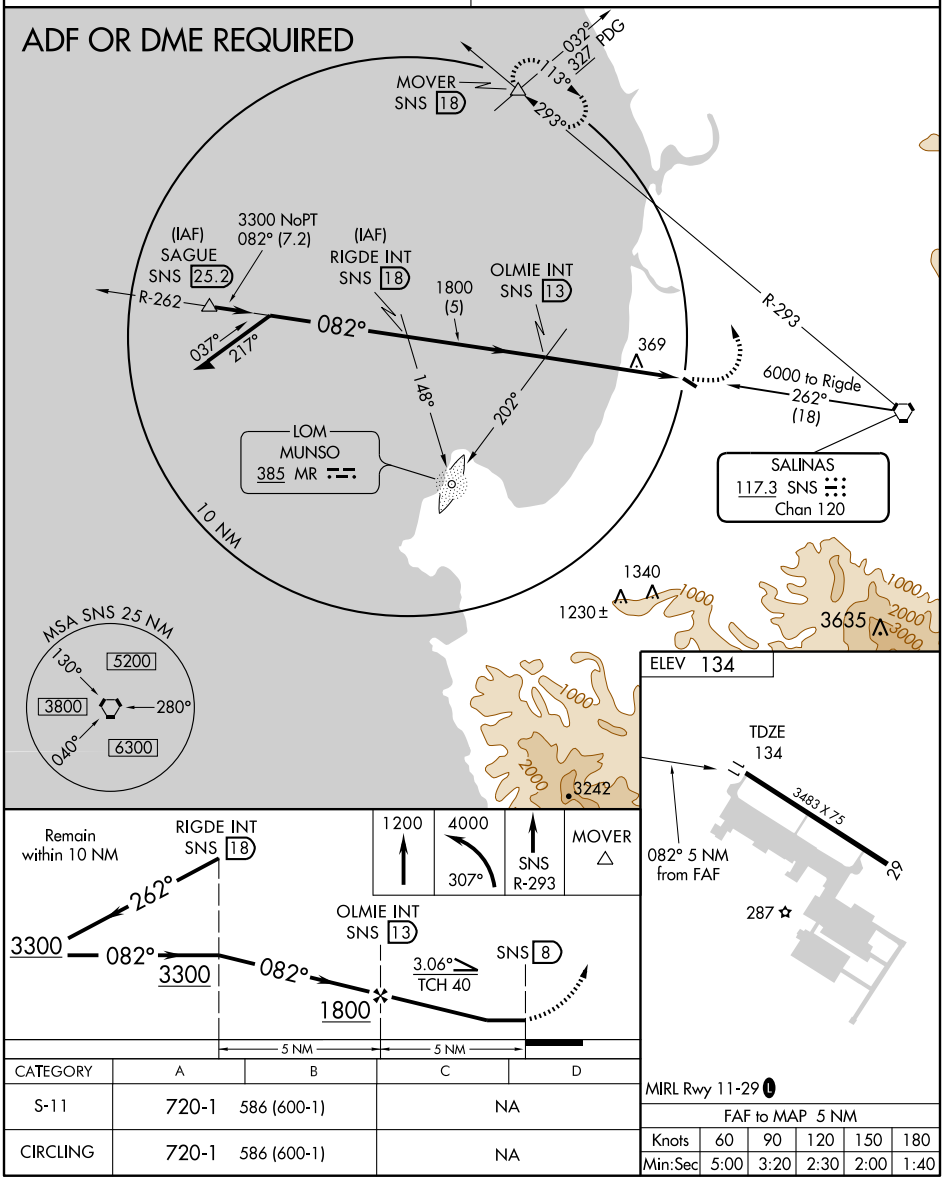

CATEGORY	A	B	C	D
S-11	720-1	586 (600-1)	NA	
CIRCLING	720-1	586 (600-1)	NA	

MIRL Rwy 11-29 L

FAF to MAP 5 NM					
Knots	60	90	120	150	180
Min:Sec	5:00	3:20	2:30	2:00	1:40