VOR/DME OXI	APP CRS	Rwy Idg	N/A
115.6	346°	TDZE	N/A
Chan 103		Apt Elev	812

VOR-A
LA PORTE MUNI (PPO)

▼ NA — If local altimeter setting not received, use South Bend altimeter setting and increase all MDAs 60 feet.

MISSED APPROACH: Climb to 2300 then climbing left turn to 2400 direct OXI VOR/DME and hold.

AWOS-3	SOUTH BEND APP CON ★	UNICOM
119.825	132.05 257.8	123.0 (CTAF) L

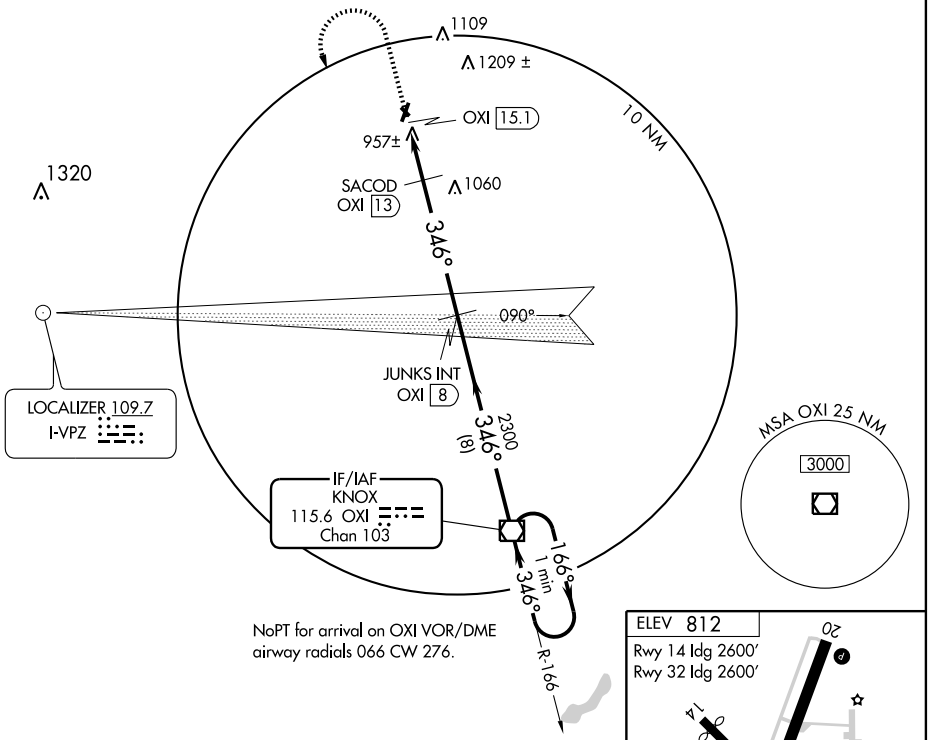

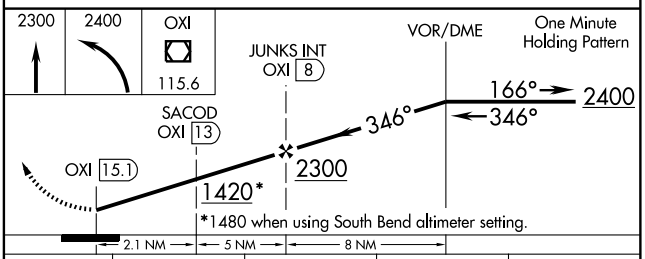

CATEGORY	A	B	C	D
CIRCLING	1420-1 608 (700-1)		1420-1¾ 608 (700-1¾)	1420-2 608 (700-2)
SACOD FIX MINIMUMS				
CIRCLING	1320-1 508 (600-1)		1320-1½ 508 (600-1½)	1380-2 568 (600-2)

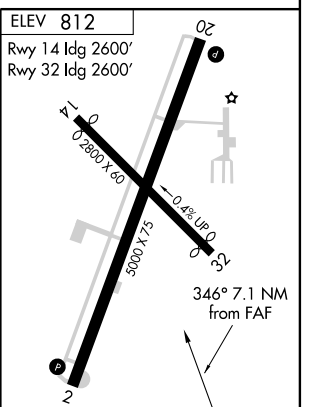

FAF to MAP 7.1 NM

Knots	60	90	120	150	180
Min:Sec	7:06	4:44	3:33	2:50	2:22

EC-2, 22 OCT 2009 to 19 NOV 2009
EC-2, 22 OCT 2009 to 19 NOV 2009