VORTAC SHB	APP CRS	Rwy Idg	N/A
112.0	142°	TDZE	N/A
Chan 57		Apt Elev	912

VOR-A

GREENSBURG MUNI (I34)

▼ ▲ NA — Use Columbus Muni altimeter setting; if not received, use Indianapolis Intl altimeter setting and increase all MDAs 40 feet.

MISSED APPROACH: Climb to 2000, then climbing right turn to 2700 via SHB R-142 to APODD INT/18 DME/RADAR and hold.

COLUMBUS MUNI AWOS-3	INDIANAPOLIS APP CON	CTAF (L)
119.75	127.15	122.9

ADF, DME or RADAR REQUIRED

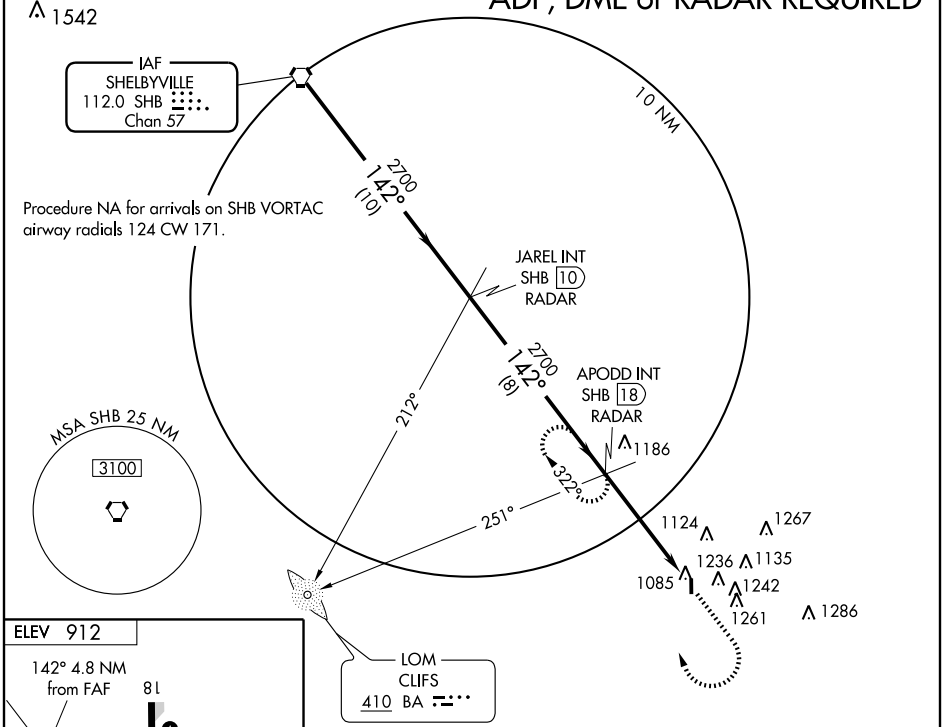

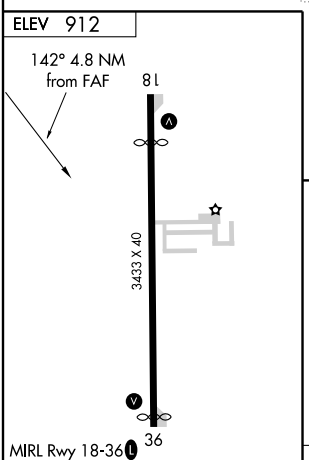

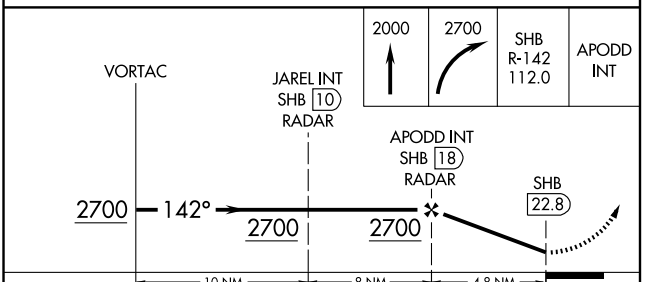

FAF to MAP 4.8 NM					
Knots	60	90	120	150	180
Min:Sec	4:48	3:12	2:24	1:55	1:36

CATEGORY	A	B	C	D
CIRCLING	1680-1 768 (800-1)	1680-1¼ 768 (800-1¼)	1680-2¼ 768 (800-2¼)	NA

EC-2, 22 OCT 2009 to 19 NOV 2009
EC-2, 22 OCT 2009 to 19 NOV 2009